

Tecsun PL-330 Special Features (firmware 3302)

Function	Radio	Key	Band	Mode	Operation
Display firm ware version	Off	VF/VM	N/A	N/A	Press and hold VF/VM until the display shows all. Before the display returns to normal it shows the firmware version in the upper right corner.
Calibrate USB/LSB sidebands	On	LSB	MW/LW/SW	SSB	<ol style="list-style-type: none"> 1. Tune in to a strong AM station 2. Press SSB 3. Adjust until zero-beat 4. Press and hold LSB until the display flashes
Toggle Internal ferrite and external whip antenna or antenna socket	On	3	MW/LW	Any	Press and hold 3 . Display shows CH-A = internal ant., CH-5 = external ant. The display shows SW in addition to MW or SW when the external antenna is selected.
FM deviation setup	On	4	FM	FM	Press and hold 4 to toggle between 75 Hz (US) and 50 Hz (Europe)
Max audio level	On	7	Any	Any	<ol style="list-style-type: none"> 1. Press and hold 7 2. Adjust with the VOLUME dial 3. Press 7 to store 4. Each band/mode has its setting, default = 58
Display seconds in time	Off	8	N/A	N/A	Press and hold 8 to show seconds or not
On PL-990 this is Muting Threshold enabled when additional features are on by holding 4 . No effect heard on the PL-330.	On	9	Any	Any	<ol style="list-style-type: none"> 1. Press and hold 9 2. Use change TUNING dial 3. Change the value in the upper left corner 4. Press ENTER to store 5. Each band/mode has its setting, default = 01